



## EasyStart Timer

### Schematic

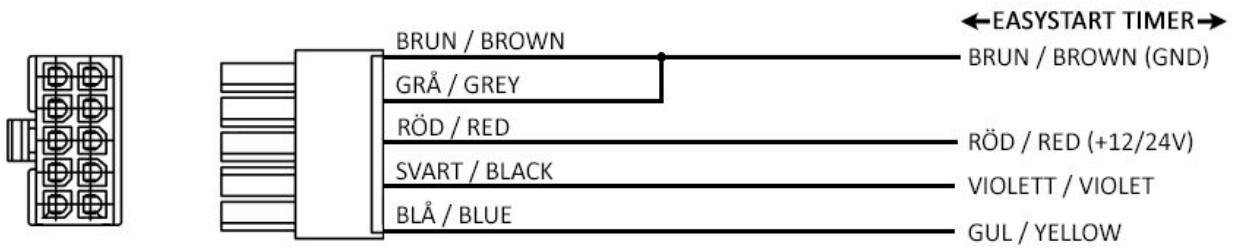

### Illustration

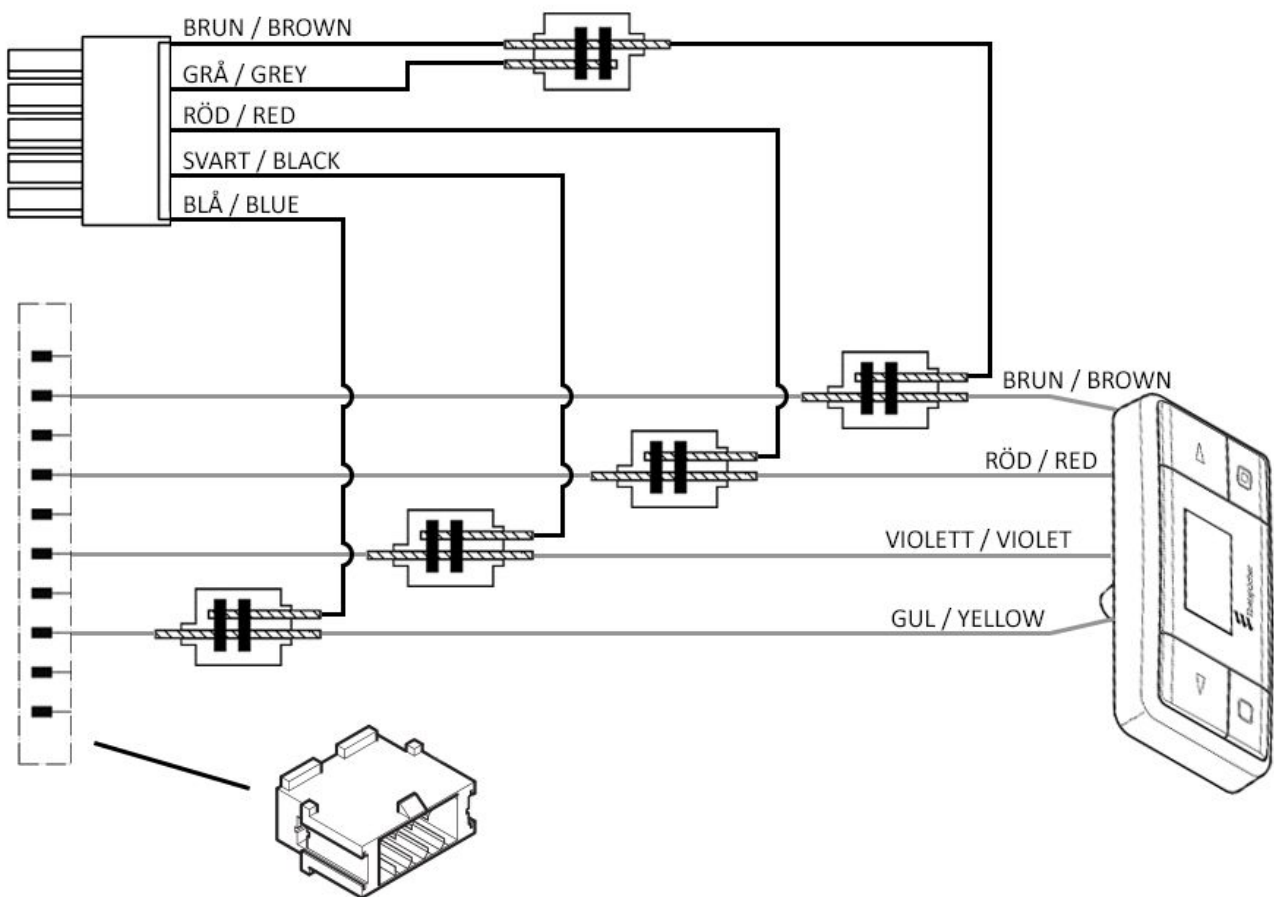

### Viktigt / Important

Skicka detta SMS "**PH0000OPMODE3**" efter sista installationssteget, enheten ska svara "**OPMODE SET OK**".

Send this SMS "**PH0000OPMODE3**" after last install step, unit should answer "**OPMODE SET OK**".

Var noga med kabelfärgerna, **Orange/Röd** och **Blå/Lila** är snarlika!

Be careful about the wire colors, **Orange/Red** and **Blue/Purple** look similar!

## Vid problem läsa detta / Read this if you have problems

Vid korrekt funktion så ska enheten svara efter man skickat start kommandot och den röda lysdioden skall lysa upp när värmaren är igång. Om detta inte är fallet och värmaren istället startar på stäng kommandot eller liknande så gör detta! **Detta är inte rekommenderat att ändra för ADR (transport av farligt gods) installationer.**

Gå in i tidurets "Verkstads meny" genom att först klicka på skiftnyckeln, när det är gjort så ska en klocka blinka i mitten. Då håller ni inne knappen längst ner till vänster i 5 sekunder tills det står "Service" i displayen. Ni kan sedan bläddra bland olika parametrar med höger och vänster pilarna. Bläddra fram till "12.1". Det ska stå något utav följande: 12.1: AD Off / 12.1: AD JE / 12.1: AD S1+ / 12.1: AD S2+

Notera först vad det står i nuläget och ändra sedan så det står **12.1: AD S1+** vilket det inte borde göra i nuläget.

If it works correctly the unit should respond after sending the start command and the red light should come on when the heater is running. If this is not the case and the heater instead starts when sending the stop command or similar do this! **Its not recommended to change this for heaters used in ADR (transport of dangerous goods).**

Go to the timer "workshop menu" by first clicking the spanner, when this is done the clock should blink in the middle. Then you hold down the button to the left for 5 seconds until "Service" is displayed. You can then flip through different parameters with left/right buttons. Go to "12.1".

It should be any of these: 12.1: AD Off / 12.1: AD JE / 12.1: AD S1+ / 12.1: AD S2+

First write down what the current value is then change this to **12.1: AD S1+** which it should not be now.

### EASystart TIMER / REMOTE+ WORKSHOP MENU

The service functions listed in the following can be displayed, read out and / or changed via the vehicle workshop menu.


#### PLEASE NOTE!

- A reset (remove 5A fuse) is necessary to activate some functions. To do this, not and follow the relevant note under "Comments" of the "Service functions overview".
- To correct the fault, refer to the heater's repair instructions.


### OPENING THE VEHICLE WORKSHOP MENU


Display ON, the Start display appears.


Use the ◀ or ▶ button to select the  symbol in the Menu bar.

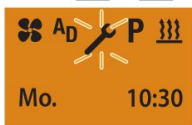


Confirm the SETTINGS menu item by pressing the  button.

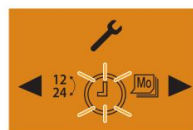


Press the  LONGPRESS button for longer than 5 sec.; the Workshop menu is displayed.

Press the ◀ or ▶ button to select the required function, e.g. »2: Select temperature unit, °C or °F◀ and confirm by pressing the  button.

Use the ◀ or ▶ button to select the temperature units °C or °F.

Press the  button to confirm the selection.

Press the  button to exit the workshop menu.